


# INSTALLATION INSTRUCTIONS


## C60 profiles suspended with quick-fit suspension brackets

These instructions apply to installation of C60 profiles suspended with quick-fit suspension brackets. Download installation instructions for all Troldtekt® panel types from [www.troldtekt.com](http://www.troldtekt.com).


### INSTALLATION OF C60 PROFILES

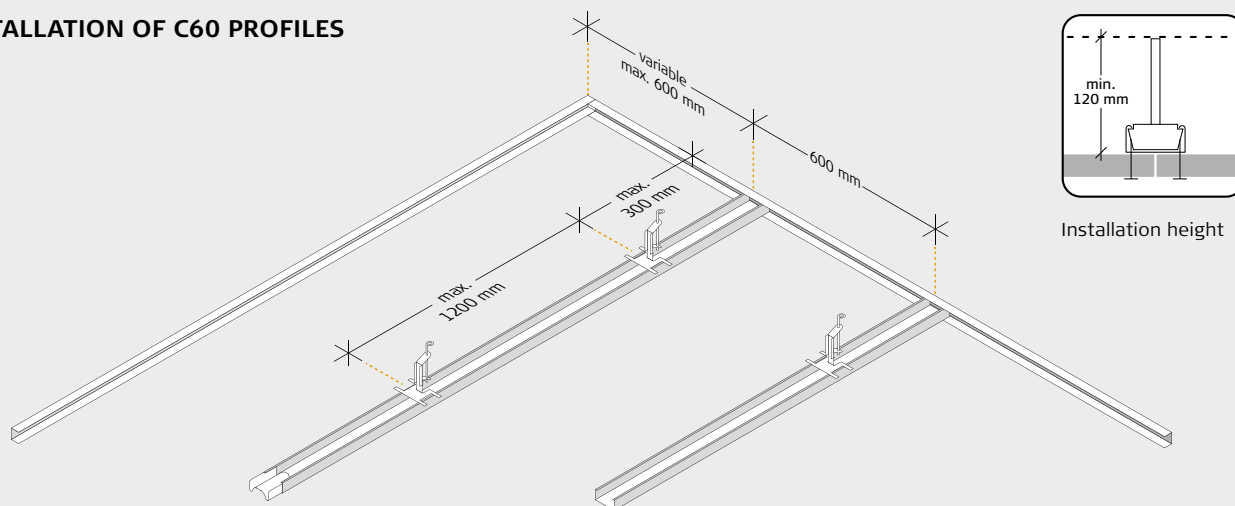


### STRUCTURAL SOFFIT

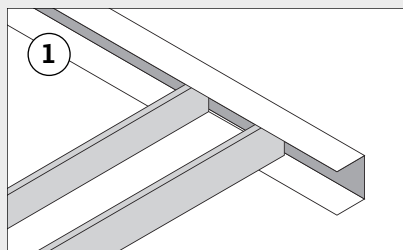

**1:** Mark the horizontal ceiling at the required height on all adjoining walls. Mark the lower side of the U-profile and fix it to the wall using 6-mm dowels in predrilled holes. Determine and mark the anchor points for the C60 profiles. Always install the first quick-fit suspension bracket max. 300 mm from the wall. Distribute the remaining quick-fit suspension brackets with a max. spacing of 1200 mm. Sätt ihop ringkroken och snabbfästet till önskad längd och fäst dem säkert i konstruktionen ovan innan ytterligare montering. Böj sedan ringkroken till lodrätt läge.

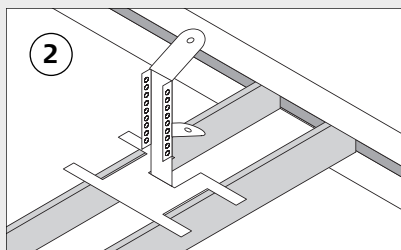


**2:** Hold a C60 profile with the opening facing upwards and fix a quick-fit suspension bracket at every hanger point. Assemble the C60 profiles longitudinally using C-connectors, and terminate the C60 profiles in the U-profile. If possible, divide the ceiling space to allow for adjustments of min. 300 mm on both sides.

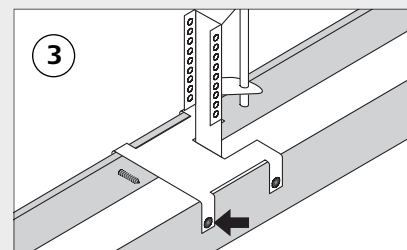

**3:** The quick-fit suspension bracket may be fixed to the main profile using screws in case of increased loads.

## COMPONENTS

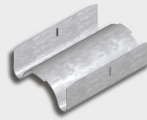


Product name	C60 profile 60×27 mm	C-connector	C-quick-fit suspension bracket	U-profile 28×27 mm
Length (mm)	4000	80	100	3000
Quantity per pack	12 pcs.	100 pcs.	50 pcs.	16 spcs.
Approx. qty. per m <sup>2</sup>	1.7 linear m	0.5 pcs.	1.4 pcs.	According to measurement



Product name	Ring hook
Length (mm)	120, 250, 375, 500, 750, 1000
Quantity per pack	100 pcs.
Approx. qty. per m <sup>2</sup>	1.4 pcs.


## NONIUS

To minimise wind-related pressure/suction impact, install the Troldtekt C60 profile system using fixed quick-hangers – nonius quick-hangers – instead of ring hooks.

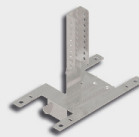


Product name	Nonius quick-fit suspension bracket	Nonius quick-hanger	Nonius split-pin
Length (mm)	100	Variable	-
Quantity per pack	50 pcs.	100 pcs.	100 pcs.
Approx. qty. per m <sup>2</sup>	1.4 pcs.	1.4 pcs.	2.8 pcs.


## NONIUS, ASSEMBLY INSTRUCTIONS

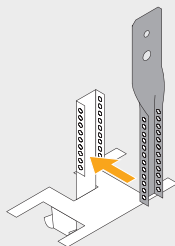

1: Place the nonius quick-hanger in the quick-fit suspension bracket

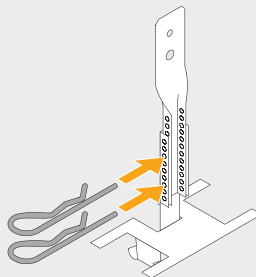

2: Secure the quick-hanger with nonius split-pins

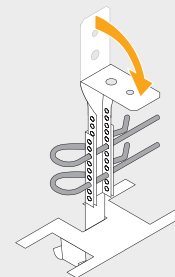

3: If necessary, fold the quick-hanger upper part